


Thank you for contacting Xybix Customer Service and giving us the opportunity to assist you with the problem you are having. Please save these instructions.



The drawer will need to be removed from the cabinet to get started.  
Once the drawer is removed find the back end of the Easy Close drawer slide.




Using a flat head or Philips head screwdriver turn the release lever Counter-Clockwise (to the left) as shown.

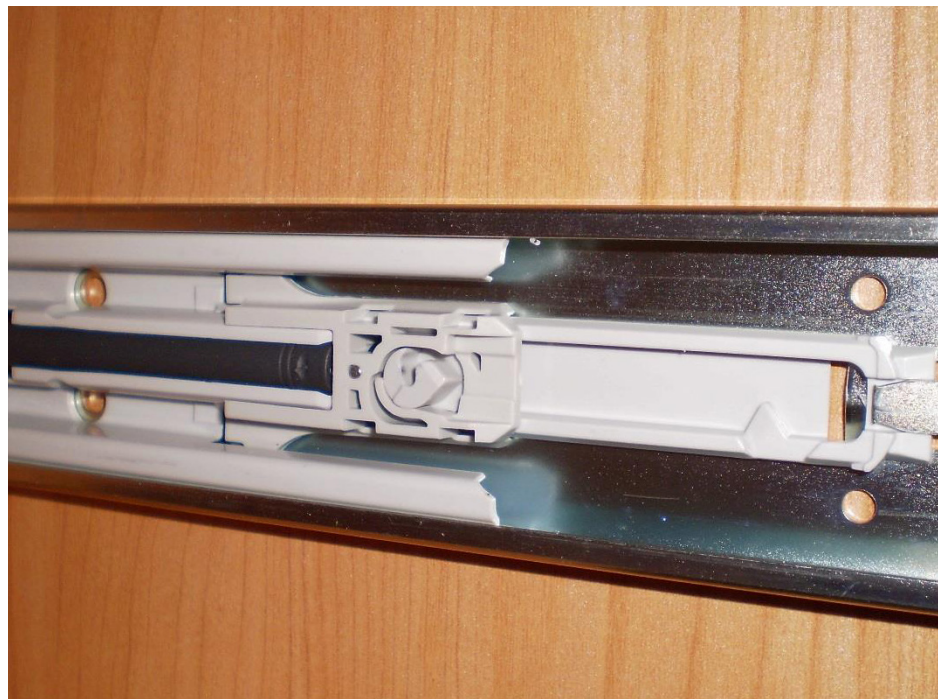

The release lever will be unlocked and can move freely.



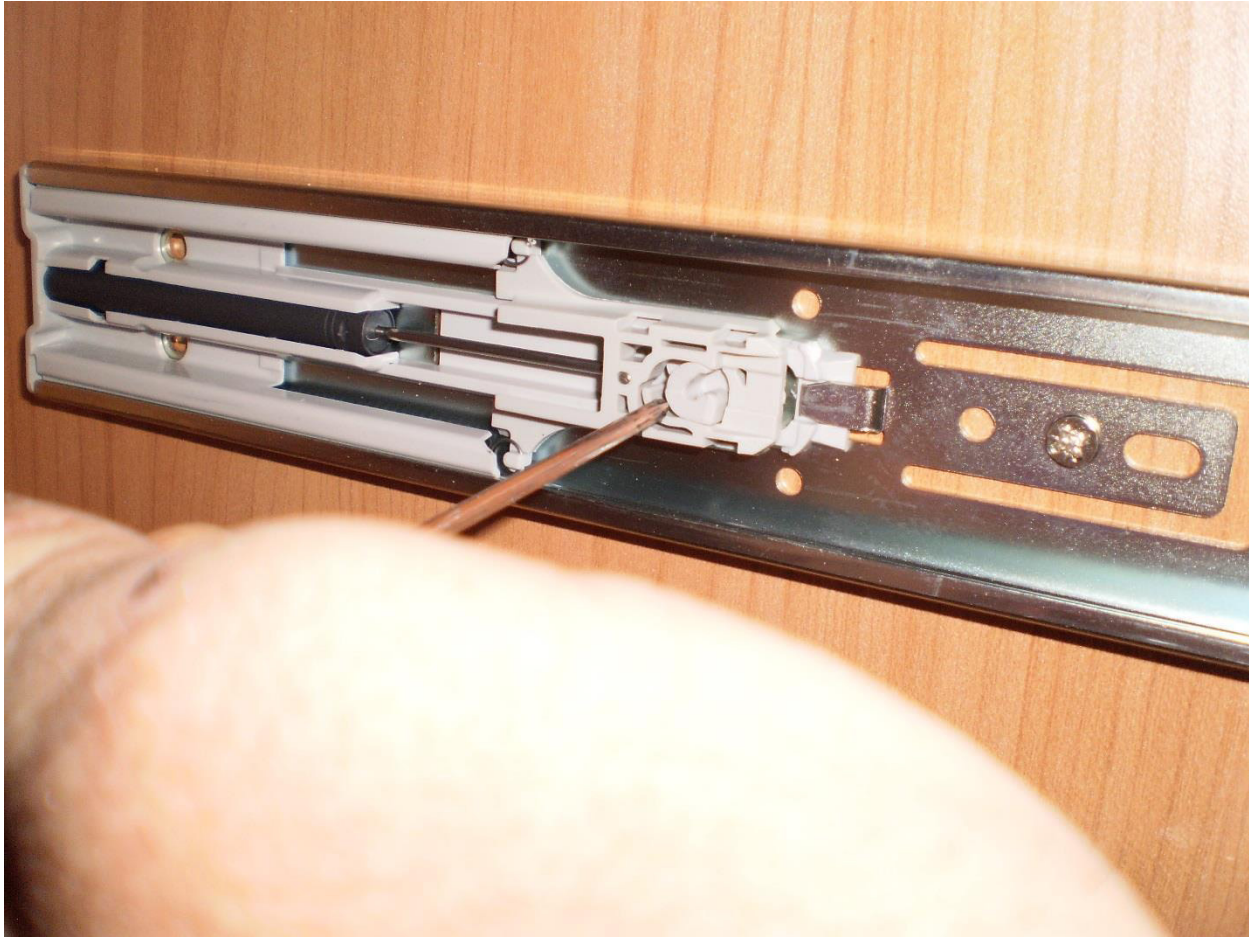

To re-place the release lever back again pull the mechanism all the way forward until it locks into place as shown.



After the release lever is locked into place the Easy-Close drawer slide is ready for the drawer box to be placed back into the cabinet.

*If you are continuing to have problems, please call or email  
Xybix Customer Service at [customerservice@xybix.com](mailto:customerservice@xybix.com) or  
800.788.2810.*